


PRIBOR SICO AIR

RAZDELILCI CEVNI DRY AIR 25-32

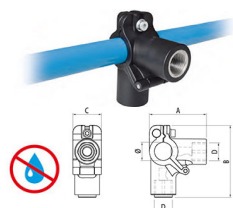

	Φ	D	A	B	C	(g)
SICOAIR RCDA-25-012	25	1/2	78	95	40	170
SICOAIR RCDA-32-012	32	1/2	78	95	40	160

RAZDELILCI CEVNI DRY AIR 40-63




	Φ	D	A	B	C	(g)
SICOAIR RCDA-40-012	40	1/2	85	93	50	255
SICOAIR RCDA-50-01	50	01	134	146,5	50	974
SICOAIR RCDA-63-01	63	01	134	146,5	50	841

RAZDELILCI CEVNI



	Φ	C	A	B	D	(g)
SICOAIR RC-20-012	20	1/2	62	37	56,5	43
SICOAIR RC-25-012	25	1/2	65	40	57,5	63
SICOAIR RC-32-012	32	1/2	78	45	59,5	102
SICOAIR RC-40-012	40	1/2	86	51	69	121
SICOAIR RC-50-012	50	1/2	86	53	78	122
SICOAIR RC-63-012	63	1/2	94	71	93,5	235
SICOAIR RC-32-034	32	3/4	78	45	60	107
SICOAIR RC-40-034	40	3/4	86	51	72	123
SICOAIR RC-50-034	50	3/4	86	53	79	126
SICOAIR RC-63-034	63	3/4	95	71	96	238

RAZDELILCI STENSKI ALUMINIJ - EN IZHOD

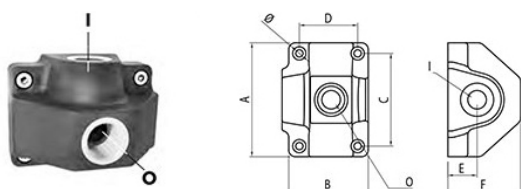


	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS1-012-012	1/2	1x 1/2	86	60	70	44	5,5	22	55	108
SICOAIR RS1-034-012	3/4	1x 1/2	86	60	70	44	5,5	22	55	108

RAZDELILEC STENSKI- EN IZHOD, IZPUST KONDENZA

	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS1V-012-012	1/2	1x 1/2	86	60	70	44	5,5	22	55	108
SICOAIR RS1V-034-012	3/4	1x 1/2	86	60	70	44	5,5	22	55	108

RAZDELILCI STENSKI ALUMINIJ - DVA IZHODA

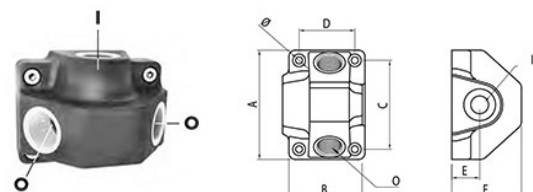


	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS2-012-2x012	1/2	2x 1/2	86	60	70	44	5,5	22	55	134
SICOAIR RS2-034-2x012	3/4	2x 1/2	86	60	70	44	5,5	22	55	134

RAZDELILEC STENSKI- DVA IZHODA, IZPUST KONDENZA

	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS2V-012-2x012	1/2	2x 1/2	86	60	70	44	5,5	22	55	134
SICOAIR RS2V-034-2x012	3/4	2x 1/2	86	60	70	44	5,5	22	55	134

RAZDELILCI STENSKI ALUMINIJ - TRIJE IZHODI

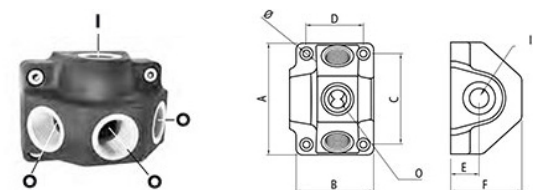


	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS3-012-3x012	1/2	3x 1/2	86	60	70	44	5,5	22	55	151
SICOAIR RS3-034-3x012	3/4	3x 1/2	86	60	70	44	5,5	22	55	151

RAZDELILEC STENSKI- TRIJE IZHODI, IZPUST KONDENZA

	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS3V-012-3x012	1/2	3x 1/2	86	60	70	44	5,5	22	55	151
SICOAIR RS3V-034-3x012	3/4	3x 1/2	86	60	70	44	5,5	22	55	151

RAZDELILCI STENSKI ALUMINIJ - ŠTIRJE IZHODI

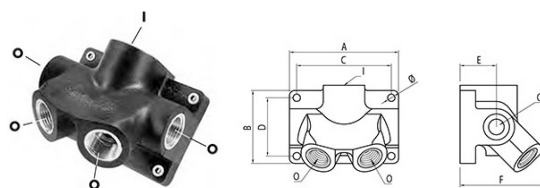


	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS4-012-4x012	1/2	4x 1/2	105	70	91	56	7	35	81,5	297
SICOAIR RS4-034-4x012	3/4	4x 1/2	105	70	91	56	7	35	81,5	297

RAZDELILEC STENSKI- ŠTIRJE IZHODI, IZPUST KONDENZA


	I	0	A	B	C	D	Φ	E	F	(g)
SICOAIR RS4V-012-4x012	1/2	4x 1/2	105	70	91	56	7	35	81,5	297
SICOAIR RS4V-034-4x012	3/4	4x 1/2	105	70	91	56	7	35	81,5	297

RAZDELILCI STENSKI POLIAMID

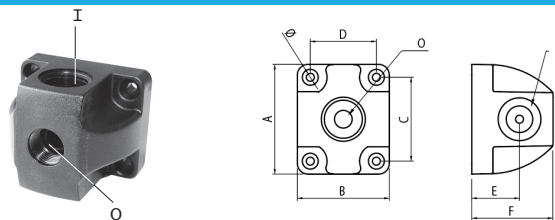


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS1-012-038-PA	1xG 1/2"	1xG 3/8"	62	52	41	37	4,5	27	46	55
SICOAIR RS1-012-012-PA	2xG 1/2"	1xG 3/8"	62	52	41	37	4,5	27	46	55

RAZDELILCI STENSKI POLIAMID - EN IZHOD

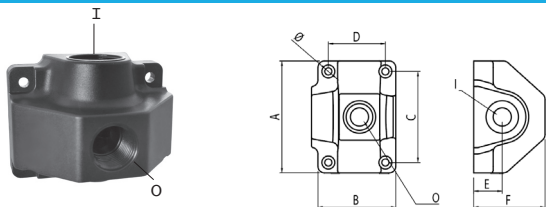


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS1-012-012-PA	G 1/2"	1x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS1-034-012-PA	G 3/4"	1x G 1/2"	86	60	70	44	5,5	22	55	88

RAZDELILCI STENSKI POLIAMID - EN IZHOD + IZPUST KONDEZA

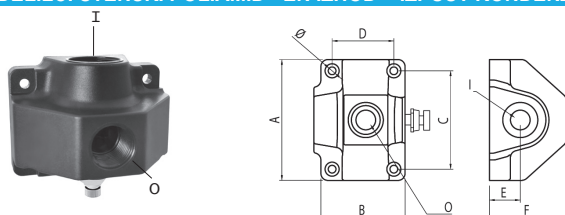


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS1V-012-012-PA	G 1/2"	1x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS1V-034-012-PA	G 3/4"	1x G 1/2"	86	60	70	44	5,5	22	55	88

RAZDELILCI STENSKI POLIAMID - DVA IZHODA

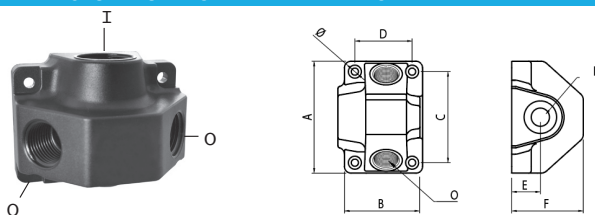


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS2-012-2x012-PA	G 1/2"	2x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS2-034-2x012-PA	G 3/4"	2x G 1/2"	86	60	70	44	5,5	22	55	88

RAZDELILCI STENSKI POLIAMID - DVA IZHODA + IZPUST KONDEZA

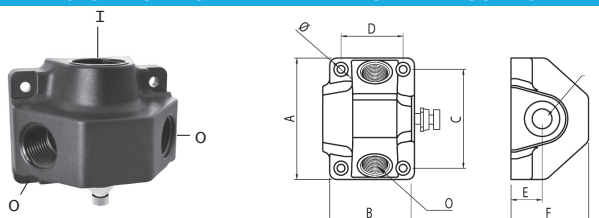


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS2V-012-2x012-PA	G 1/2"	2x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS2V-034-2x012-PA	G 3/4"	2x G 1/2"	86	60	70	44	5,5	22	55	88

RAZDELILCI STENSKI POLIAMID - TRIJE IZHODI

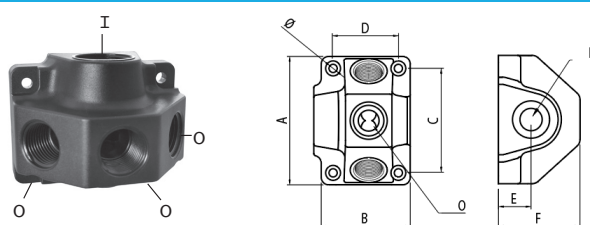


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS3-012-3x012-PA	G 1/2"	3x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS3-034-3x012-PA	G 3/4"	3x G 1/2"	86	60	70	44	5,5	22	55	88

RAZDELILCI STENSKI POLIAMID - TRIJE IZHODI + IZPUST KONDEZA

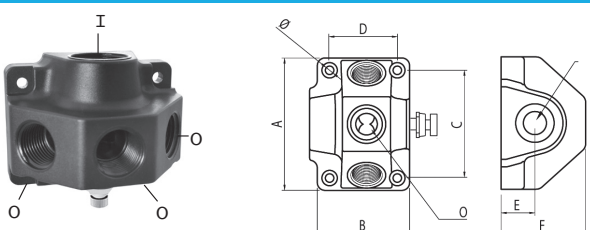


	I	O	A	B	C	D	Ø	E	F	(g)
SICOAIR RS3V-012-3x012-PA	G 1/2"	3x G 1/2"	86	60	70	44	5,5	22	55	88
SICOAIR RS3V-034-3x012-PA	G 3/4"	3x G 1/2"	86	60	70	44	5,5	22	55	88

SICOAIR DISTANČNIK

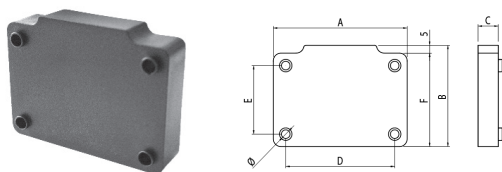


	A	B	C	D	Ø	E	F	(g)
SICOAIR DISTANČNIK 10 mm	85	65	10	70	5,5	44	60	23
SICOAIR DISTANČNIK 13 mm	85	65	10	70	5,5	44	60	25
SICOAIR DISTANČNIK 20 mm	85	65	10	70	5,5	44	60	117

UPORABA DISTANČNIKOV Z RAZDELILNIMI BLOKI

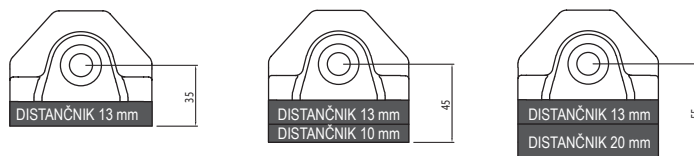


IZPUSTNI VENTILI

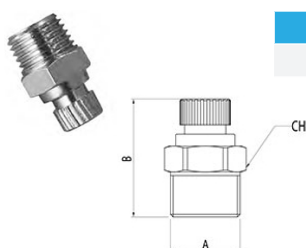


	A	B	CH	(g)
SICOAIR IZP-014	1/4	23	14	15

DRŽALA CEVI SICOAIR

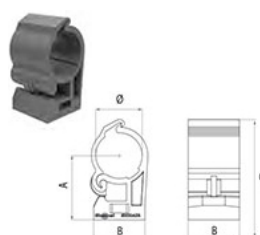


	Φ	A	B	C	(g)
SICOAIR DRŽALO CEVI- 20	20	35	36	54	18
SICOAIR DRŽALO CEVI- 25	25	35	36	56	18
SICOAIR DRŽALO CEVI- 32	32	45	36	70	26
SICOAIR DRŽALO CEVI- 40	40	45	36	75	28
SICOAIR DRŽALO CEVI- 50	50	55	36	92	34
SICOAIR DRŽALO CEVI- 63	63	55	36	98	36

DRŽALA CEVI SICOAIR

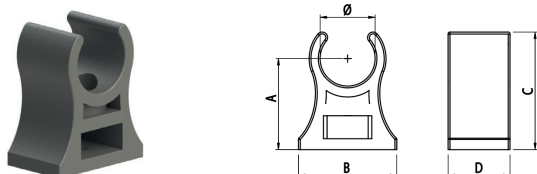


	Φ	A	B	C	D	(g)
SICO QUICKAIR DRŽALO CEVI-15	15	25	27	30	17	6
SICO QUICKAIR DRŽALO CEVI-22	22	35	27	42	17	7
SICO QUICKAIR DRŽALO CEVI-28	28	35	27	45	17	8
DISTANČNIK SICO QUICKAIR-10	-	10	27	-	17	3

KOMBINACIJA RAZLIČNIH PREMEROV CEVI

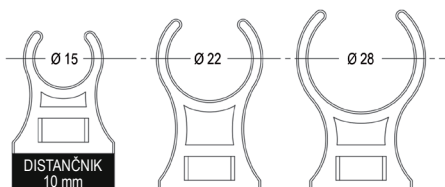


ORODJE ZA DEMONTAŽO QUICK AIR PRIKLJUČKOV

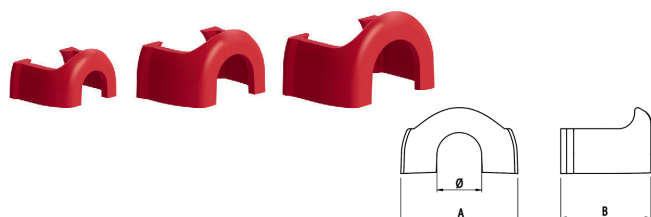


	Φ	A	B	(g)
DEMONTAŽNO ORODJE QUICKAIR-15	15	40	31	6
DEMONTAŽNO ORODJE QUICKAIR-22	22	52	34	10
DEMONTAŽNO ORODJE QUICKAIR-28	28	59	39	13

VARNOSTNI SISTEM

- Posebno orodje za demontažo.
- Preprečuje neželjeno razstavljanje cevi.

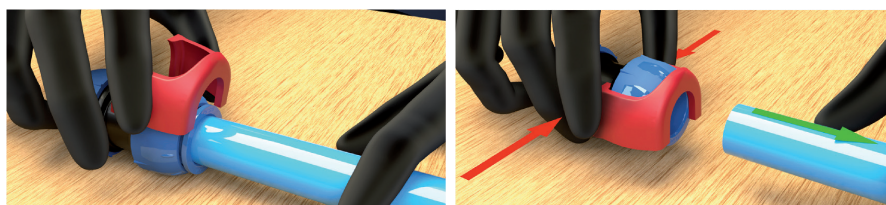


MATICE

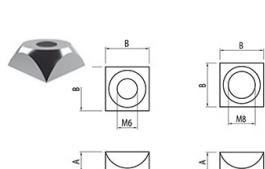

	G	A	B	(g)
SICOAIR MATICA M6	M6	6	13	3
SICOAIR MATICA M8	M8	6	13	3

INSERTI SAMOLEPILNI

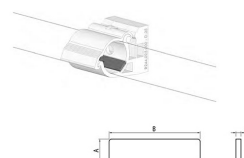

	A	B	C	(g)
SICOAIR EPDM INSERT	9	36	2	1